

Betriebsanleitung
 Operating Instructions
 Instructions de service
 Istruzioni d'uso
 Handleiding
 Instrucciones para el manejo
 Manual de instruções
 Naudojimosi instrukcija
 Kasutusjuhend
 Lietošanas instrukcija
 Οδηγίες χρήσης
 取扱説明書
 사용설명서

Driftsinstruks
 Driftsinstruktioner
 Käyttöohje
 Driftsvejledning
 Instrukcja obsługi
 Kezelési útmutató
 Návod k obsluze
 Navodilo za uporabo
 Návod na obsluhu
 El Kitabi
 Инструкция по эксплуатации
 使用说明书




U 4.70



98/37 EG
 73/23 EWG










DIN EN ISO 14001:2005


DIN EN ISO 9001
001929 QM

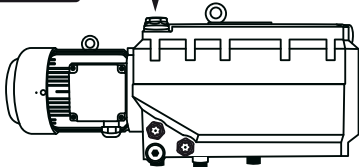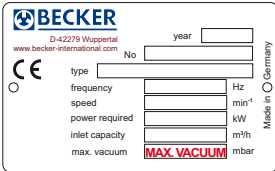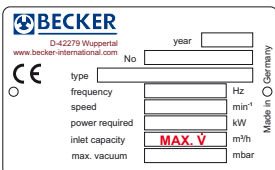
			 Becker Lube M 100 ▷ 2,0 Liter		 MAX. VACUUM	  mbar
						  m³/h
 AIR					DIN EN ISO 2151 DIN EN ISO 3744	$L_{pA} = 67 \text{ dB(A)} - 50\text{Hz}$ $L_{pA} = 68,5 \text{ dB(A)} - 60\text{Hz}$ $K_{pA} = 3 \text{ dB(A)}$

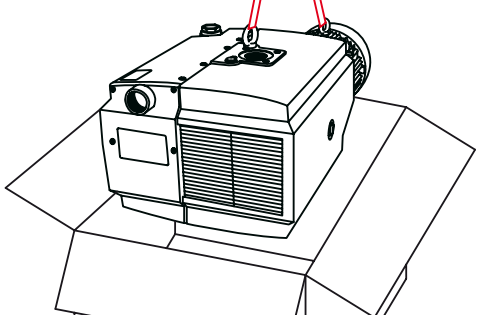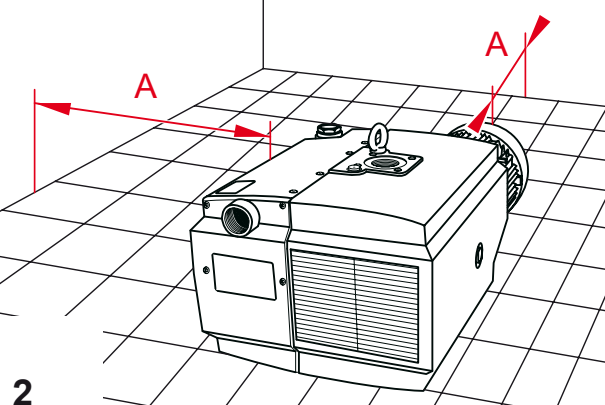 64,5 kg 142,2 lbs   1			$A > 100\text{mm}$ $A > 4"$	 $> 5^\circ\text{C}/41^\circ\text{F}$ $< 40^\circ\text{C}/104^\circ\text{F}$	 max. 90%	 max. 800m  2
--	--	--	---	---	---	---

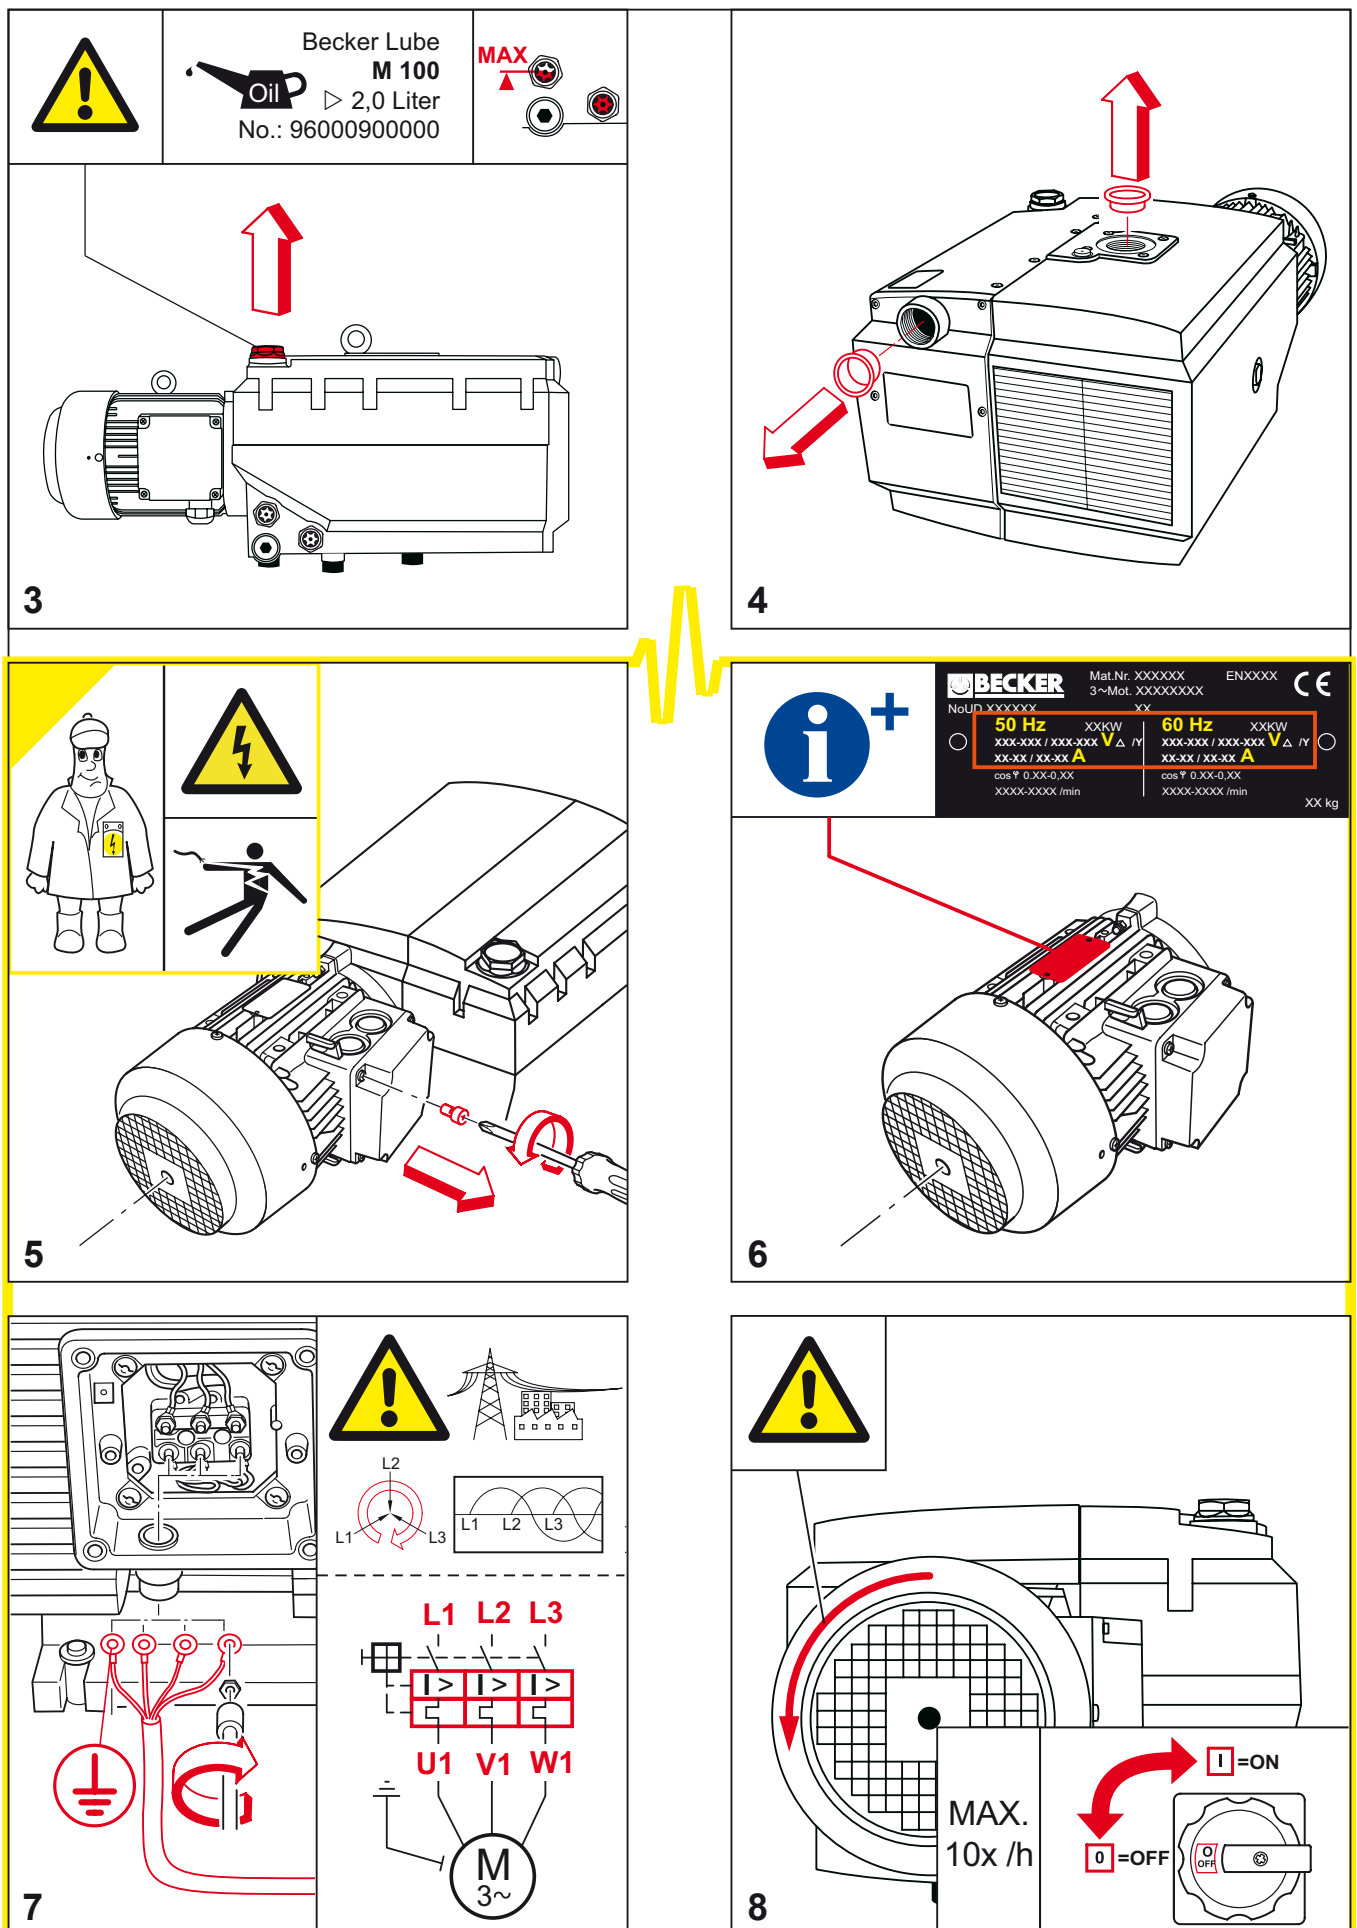


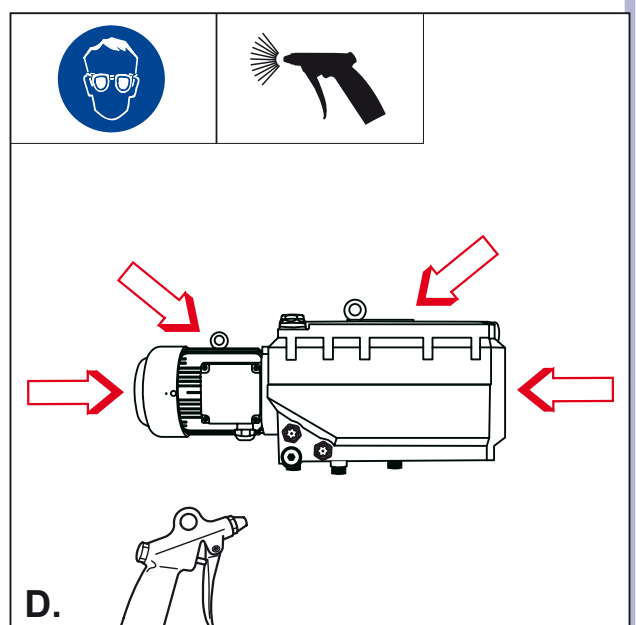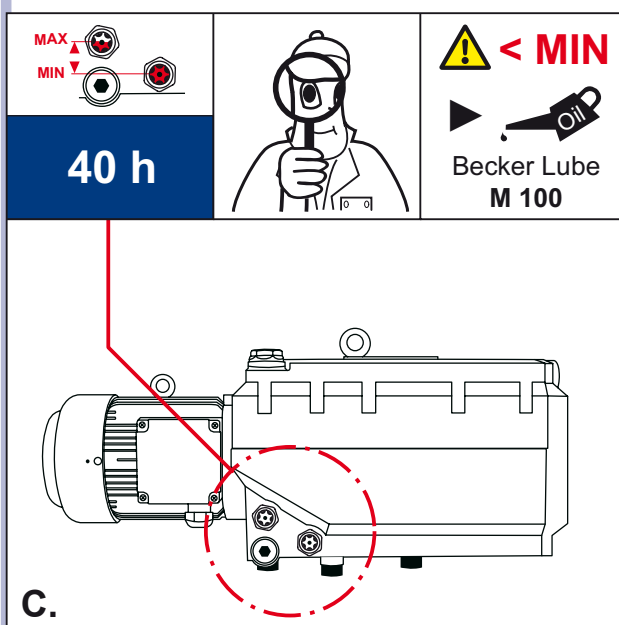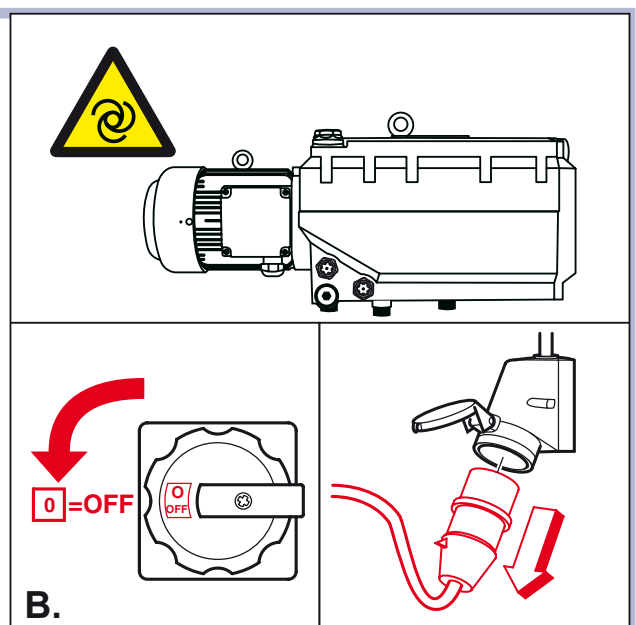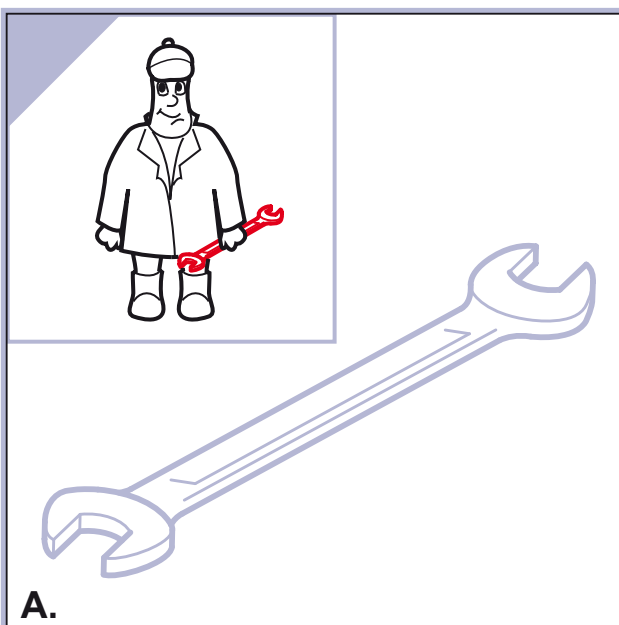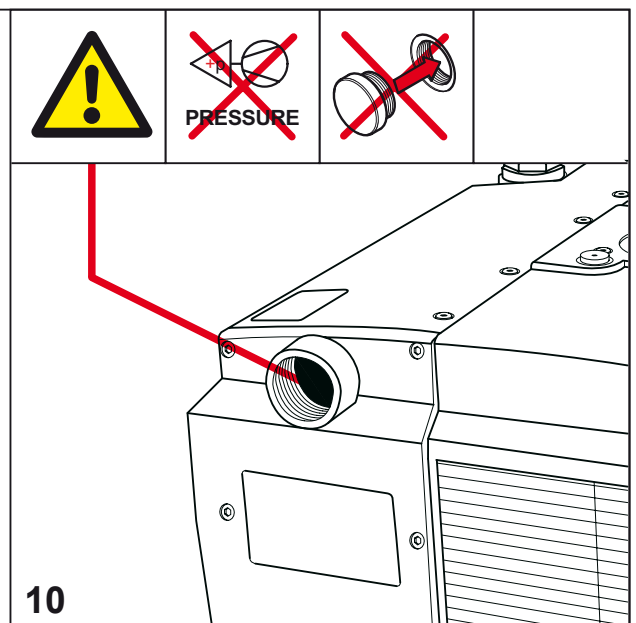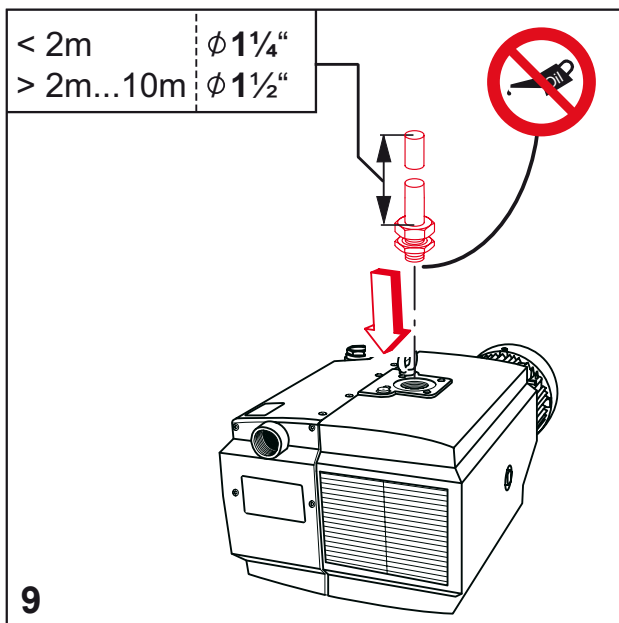



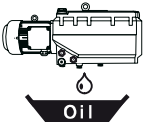
 Oil	1. = 100h 2. = 1.000h 3. = 2.000h ... (min. 2x/a)	 
--	--	---

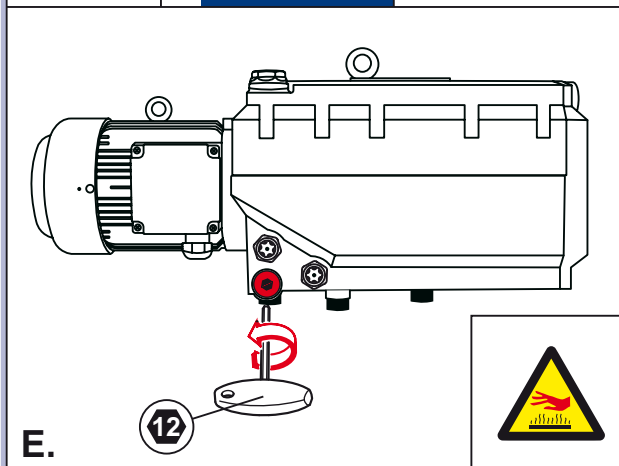



 Oil	Becker Lube M 100 ▷ 2,0 Liter No.: 96000900000	MAX 
---	--	---




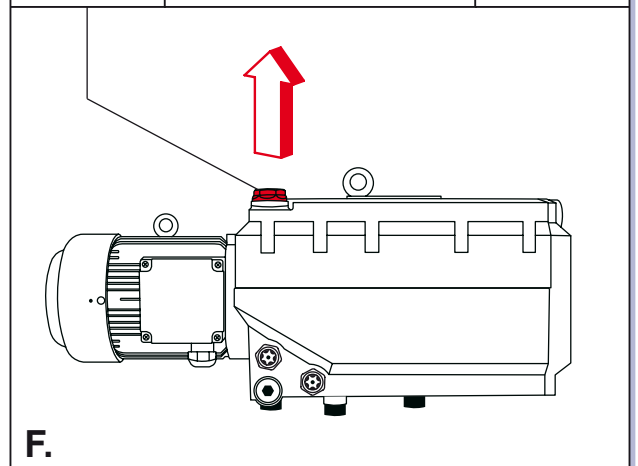


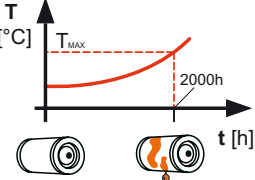		
2000 h		

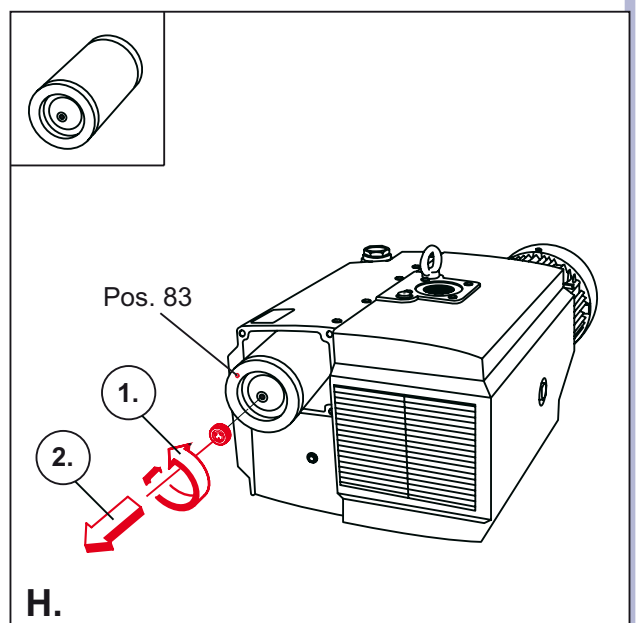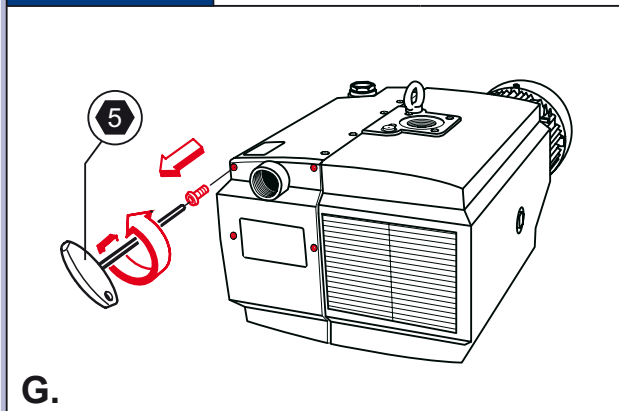

	Pos. 83 No.: 96541600000	 
---	-------------------------------------	---

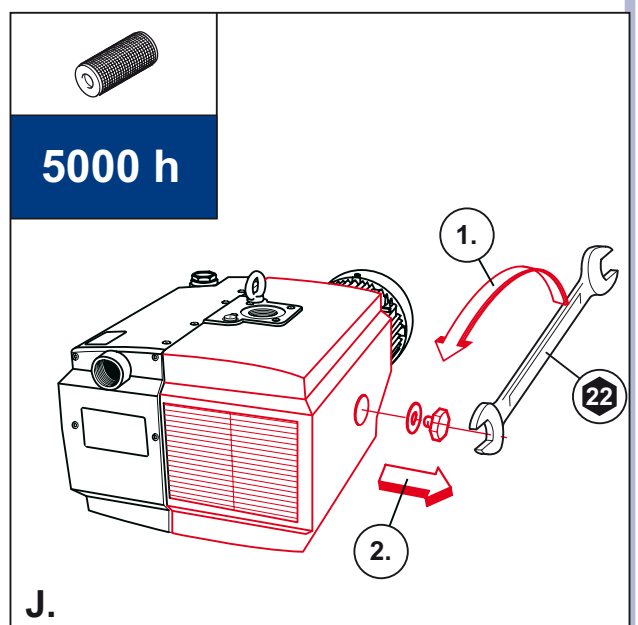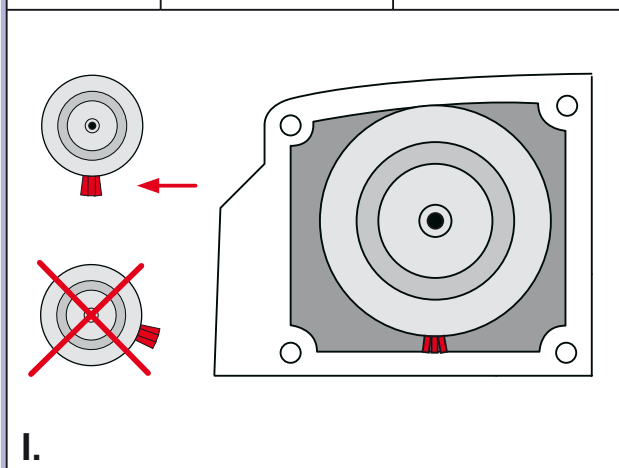

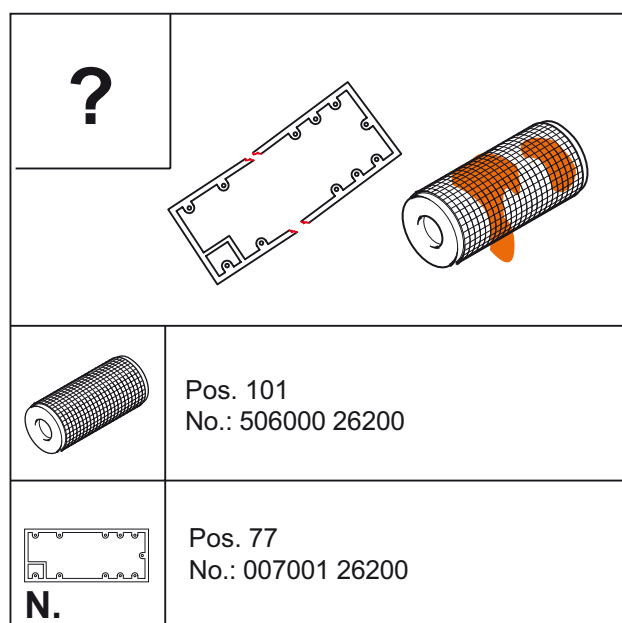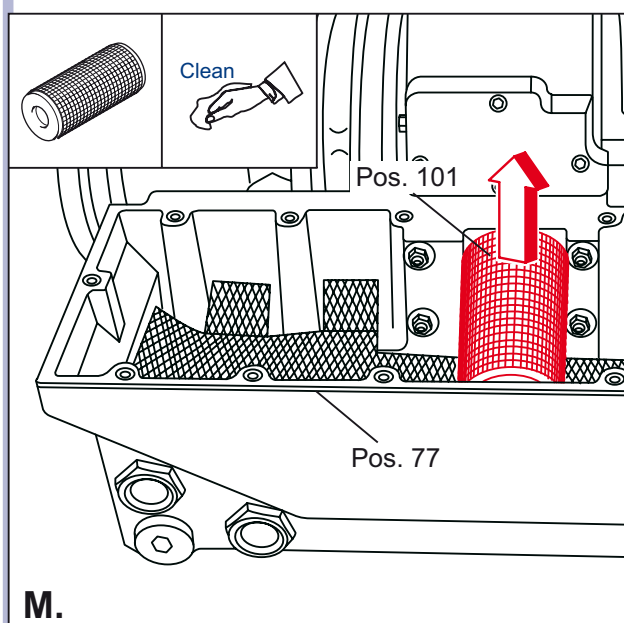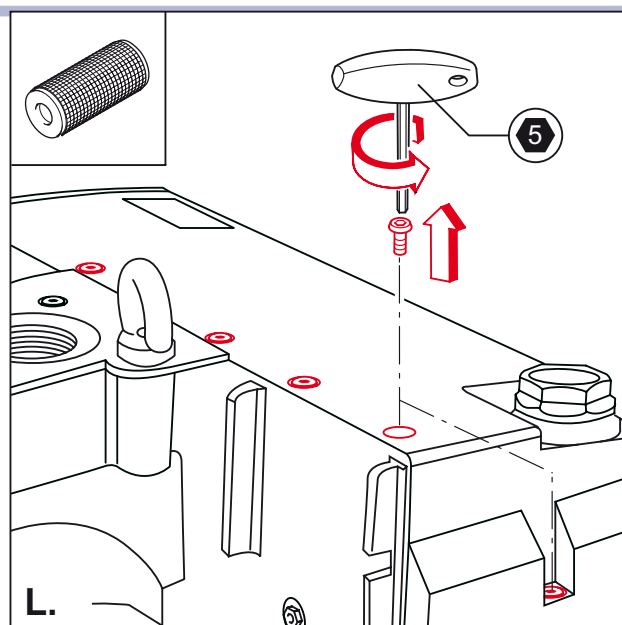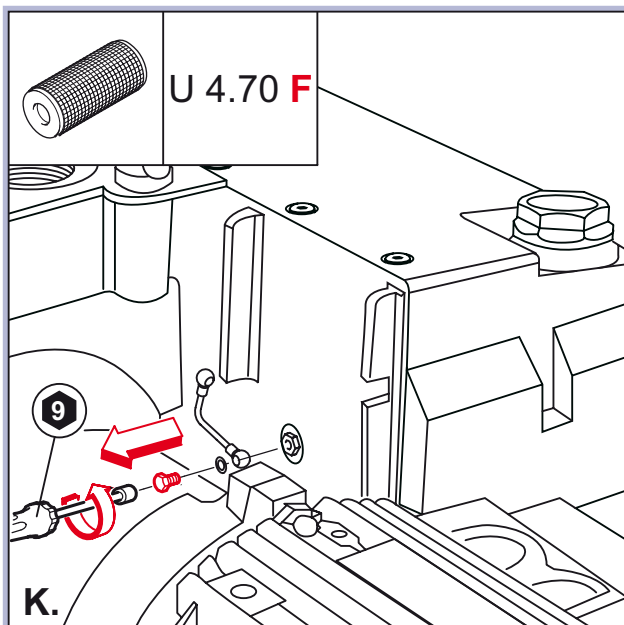

Gebr. Becker GmbH
Hölker Feld 29-31
D-42279 Wuppertal

info@becker-international.com

(D) Service:

Tel: +49 (0)202 697-171

Fax: +49 (0)202 64 44 74